



WARNING: while pulling rods down to attach at front of kayak, be aware there is tension on these rods that can harm you or others if they are not secured properly!

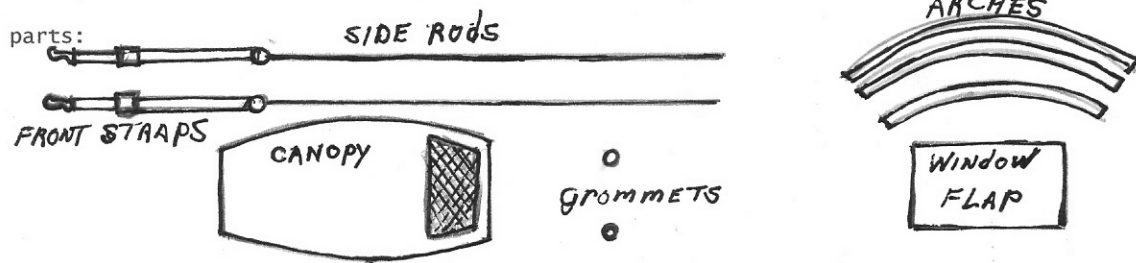


parts inventory: 2--1/4" fiber rods, two nylon straps at end of fiber rods, 2 rubber grommets, 3 arched tubes marked 1,2,3, window flap and canopy. [window may be separate from canopy]

step 1. lay fiber rod on flat surface parallel with each other. slide arched piece 1 onto rods [rods slide through holes at each end of arch] until it is on the last mark. slide rubber grommets onto each rod until they are against the first arch. slide arch two to next mark and arch three to remaining mark. canopy frame should look like drawing below.

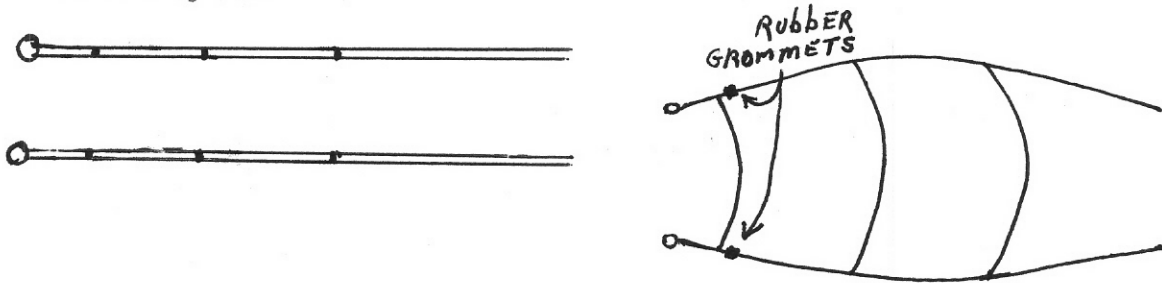


step 2. Take canopy frame from flat surface and insert the two rod ends into fishing rod holders behind seat {if there is no bottom to rod holders, insert something into rod holders first to keep canopy rods from going to far down}. At this stage, the frame should be sticking straight up behind seat.

step 3. stand at either side of the kayak, grab the rode on this side and bend it towards the front of kayak. [be aware of the tention in the rods and keep a firm hold until you have secured the ends]. when you have bent the rod close enough, snap the clip to a pad eye. Move to the other side and repeat. canopy frame should be in an arch over kayak.

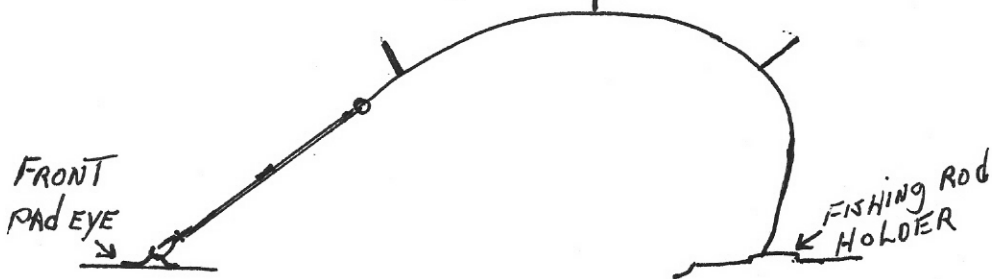

step 4. PUTTING CLOTH CANOPY ON FRAME: Unroll the cloth top and position top on the frame so the screened window is toward the back. Next, move to front and undo the front flap hook and loop, wrap over front arch and reattach hook and loop. Do each arch cover in the same manor. Next, undo hook and loop on either side and wrap around side rods the full length of the top, repeat on other side. At the back of the top you will find two straps with clips, these are to hold the top down onto the kayak. Take each of the straps and snap to a pad eye at back of kayak [use a pad eye at least 18" from the back rod holders].

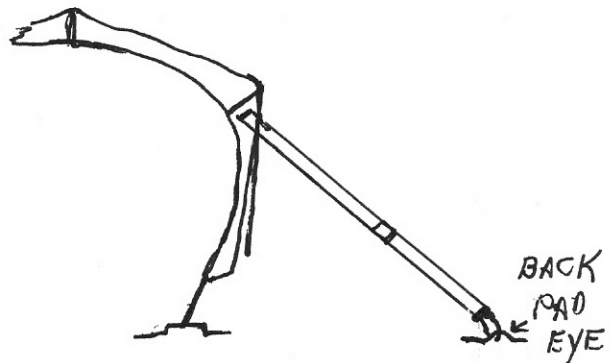

NOTE: If you encounter high winds on your ride, detach hook and loop on both sides of back panel and roll entire back panel up to back arch. The window flap will serve as a cover for the roll by attaching hook and loop tabs on window flap to hook and loop tabs on under side of top at back arch.

LIFE IS A JOURNEY, SO ENJOY THE RIDE